



able in a number of center fire calibers. Two (2) grades are sup-plied . . , Standard and new BDL "Custom Deluxe." Standard grade lists both rifle and carbine length models.

A five (5) shot capacity is available in both models, counting four (4) cartridges in detachable clip magazine and one (1) in barrel chamber. Extra clips can be ordered,

A new step receiver styling design for the BDL provides a level-line sighting from stock to sights. Front and rear sights are removable for additional telescope mounting sight requirements. Barrel screw holes may be filled with receiver plug screws removed from receiver.

The American walnut stock features a checkpiece and Monte Carlo comb on the BDL grade. For left hand shoot-ers, a checkpiece and left hand safety are available in the BDL. In both grades, the form fitting pistol grip has been accentuated with a black cap and white spacer. A black fore-end tip and white spacer are also standard items on the fore-ends of both grades.

Custom checkering has been applied to the stock and fore-end. An attractive basket weave pattern highlights the BDL grade while a neat "skip line" design is offered in the standard. The tough Du Pont RK-W wood finish adds a lustrous quality appearance to both grades.

SAFETY (Fig. 1) — Cross bolt type at rear of trigger. Red band marking on safety will not show when safety is pushed across to ON SAFE stop position. Trigger cannot be pulled to fire cartridge.

Caution: Before firing make sure barrel is clean, free of heavy oil, grease, snow, or any obstruction.

To FIRE — Push safety to FIRE position. Red band marking on safety will show.

REPEAT FIRING - Trigger must be pulled each time. Slide fore-end back and forth to eject fired cartridge case and reload barrel.

TO SINGLE LOAD BARREL – Push safety ON SAFE. Unlock action by pressing upward on action bar lock (Fig. 1). Slide fore-end back to open action. Drop cartridge into open receiver port and upon empty magazine. Close action to load cartridge in barrel.


TO MAGAZINE LOAD — Push safety ON SAFE. Rotate magazine latch (Fig. 1) forward and pull out magazine. Load cartridges toward small front end of magazine. Press cartridges down into magazine one upon the other, until held in a stagger column. When fully loaded, magazine will hold four (4) cartridges. To replace magazine, operate latch again, push magazine evenly into gun. Release latch as magazine clicks into locked position.

TO UNLOAD MAGAZINE – Remove from gun and slide cartridges carefully forward and out of magazine. Extra magazines may be carried for fast reloading.

TO UNLOAD BARREL - Push safety ON SAFE, Remove magazine. Press action bar lock upward to unlock action. Open action slowly, and carefully remove live cartridge from receiver.

SIGHT ADJUSTMENT — Factory sights on Remington high power rifles are targeted at 100 yards and carefully adjusted at factory for average shooters. If your rifle does not appear to shoot accurately it does not necessarily mean that sights are improperly aligned. Individual differences in eyesight or method of shooting may require sight re-alignment. Make sure that adjustable dovetail front sight (where supplied) is centered on barrel. Before attempting to re-align sights it should be realized that the greater the group size the more difficult it becomes to determine where rifle is shooting (center of impact). A consistent method of holding rifle, aiming and squeezing trigger will aid in obtaining a small group size. Different sight settings are required for each cartridge type, bul-let type and weight, barrel length, each range and wind condition and, most likely, each individual shooter.

To test rifle for accuracy place large target in safe area at desired range. (Before testing at a longer range it is advisable to fire a few rounds at 50 yards. At this range, bullets will generally hit somewhere on target.) Shoot from a prone or sitting position giving body and el-bows solid support. Fire four or five shots per group, using ammunition with which you plan to hunt. Shoot carefully and

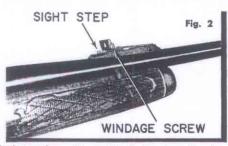

deliberately. If groups are at desired point, sights are cor-rectly adjusted. If not, you should adjust sights.

If shots are too high, lower rear sight. If shots are too low, rear sight should be raised. If rifle shoots left, rear sight should be moved right by turning windage screw counter clockwise. Should rifle shoot to right, move rear sight to left, turning screw clockwise. Always move rear sight in direction you want rifle to shoot.

Information about trajectory or ballistics of your favorite load may be found in the Remington Firearms and Ammunition Catalog. A free copy may be obtained from Remington dealers or by writing to Remington Arms Co., Inc., 939 Barnum Ave., Bridgeport, Conn. 06600.

HANDLING — Wipe barrel, receiver, and all steel parts to prevent rusting. Invisible "prints" of moisture can cause rust unless removed. After cold weather use, when gun is returned to warm room temperature, condensation and wetness may form. Take care that this is removed. In particular wipe dry cartridge chamber in breach of barrel, barrel bars, breech bolt, and other action parts. Lubricate sparingly unless for storage, then lubrication should be quite thorough. For cold weather shooting, use dry graphite instead of light oil. Use sparingly—a clean gun performs best.

REMINGTON ARMS COMPANY, INC. ILION, NEW YORK, U.S.A. .... "Gamemaster" is Reg. U.S. Pat. Off. by Remington Arms Company, Inc., Bridgeport 2, Conn.

MODEL **760** 

### SLIDE ACTION — HIGH POWER RIFLE • CARBINE

**COMPONENT PARTS** 

PRICE LIST

Note: Basic 30-06 Caliber listed below. See Sectional View for proper identity of parts.

### When ordering parts-Model No., Part No. and Part Name must be given.

5595 3609 2478 5605 5215 4615 5915 3602 0674 5017 5660	Action Bar Assembly, (includes Action Bar, Fore-end Tube, Fore-end Tube Plug, Fore-end Tube Yoke) Action Bar Lock Action Bar Lock Spring Action Tube Assembly (includes Action Tube Ring also) Action Tube Ring Barrel Assembly, 30-06 (includes Barrel, Barrel Extension, Breech Ring) Barrel Assembly, 30-06 Carbine	\$ 5.80 1.10 .25 3.05 .40 .40	45 46 47 48 49	16454 16023 16456 28095	Rear Sight Base Rear Sight Base Screw Rear Sight Screw Rear Sight Step (selected sizes)	
3609 2478 5605 5215 4615 5915 3602 3674 5017	Fore-end Tube, Fore-end Tube Plug, Fore-end Tube Yoke)	1.10 .25 3.05 .40	46 47 48	16023 16456 28095	Rear Sight Base Screw Rear Sight Screw	
2478 5605 5215 4615 5915 3602 3674 5017	Action Bar Lock Action Bar Lock Spring Action Tube Assembly (includes Action Tube Ring also) Action Tube Ring Barrel Assembly, 30-06 (includes Barrel, Barrel Extension, Breech Ring) Barrel Assembly, 30-06 Carbine	1.10 .25 3.05 .40	47 48	16456 28095	Rear Sight Screw	
2478 5605 5215 4615 5915 3602 3674 5017	Action Bar Lock Spring Action Tube Assembly (includes Action Tube Ring also) Action Tube Ring Barrel Assembly, 30-06 (includes Barrel, Barrel Extension, Breech Ring) Barrel Assembly, 30-06 Carbine	.25 3.05 .40	48	28095		-
5605 5215 4615 5915 3602 0674 5017	Action Tube Assembly (includes Action Tube Ring also) Action Tube Ring Barrel Assembly, 30-06 (includes Barrel, Barrel Extension, Breech Ring) Barrel Assembly, 30-06 Carbine	3.05 .40	1.5.5			- 3
5215 4615 5915 3602 0674 5017	Ring also) Action Tube Ring Barrel Assembly, 30-06 (includes Barrel, Barrel Extension, Breech Ring) Barrel Assembly, 30-06 Carbine	.40		16968	Rear Sight Washer	
4615 5915 3602 3674 5017	Barrel Assembly, 30-06 (includes Barrel, Barrel Extension, Breech Ring) Barrel Assembly, 30-06 Carbine			21490	Receiver Assembly (includes Receiver, Barrel Bracket Bolt, Receiver Plug Screw (4), Re-	
5915 3602 3674 5017	Extension, Breech Ring) Barrel Assembly, 30-06 Carbine	e on cation			ceiver Stud, Stock Bearing Plate)	
3602 3674 5017	Barrel Assembly, 30-06 Carbine	0 10	50	15907	Receiver Assembly, BDL	22.
3602 3674 5017			51	17034	Receiver Plug Screw	
0674 5017		J Tad	52	18551	Receiver Stud	
0674 5017	Barrel Bracket Bolt	.25	53	25115	Safety	
5017	Bolt Carrier	6.60	54	23223	Safety Detent Ball	
	Bolt Carrier Spring	.25	55	17514	Safety Spring	
5660			56	17515	Safety Spring Retaining Pin	
	Breech Bolt Assembly (includes Breech Bolt,	Price on	57	18750	Sear	
	Elector, Elector Retaining Pin, Elector Spring,		58	17463	Sear Pin	
	Extractor, Exrtactor Rivet, Bolt Carrier Spring)	J a d	59	17518	Sear Spring	
472	Butt Plate	1.10	1	30490		
5410	Butt Plate Screw	.25		30470	Stock Assembly (includes Stock, Butt Plate, Butt Plate Spacer, Butt Plate Screw (2), Grip Cap,	
473	Butt Plate Spacer	.25			Grip Cap Spacer)	18
3384	Cam Pin (Ig.) (also used in old style Bolt Carrier)	.25	60	28590	Stock Assembly, Right Hand, BDL Grade (in- cludes Stock, Grip Cap, Grip Cap Spacer,	-
673	Cam Pin (sm.)	.25			Butt Plate, Butt Plate Screw (2)	
419	Connector, Left	.40		28591	Stock Assembly, Left Hand, BDL Grade	
7551	Connector, Right	.25	62	19621	Stock Bearing Plate	
420	Connector Pin	.25	63	18571	Stock Bolt	
945	Ejection Port Cover	.35	64	18572	Stock Bolt Lock Washer	
5291	Ejector	.55	65	18573	Stock Bolt Washer	
325	Ejector Retaining Pin	.25		25370		
5292	Ejector Spring	.25	66		Trigger	- 1
254	Extractor	1.35		20610	Trigger Assembly (includes Trigger; Connector, Right; Connector, Left; Connector Pin)	
340	Extractor Rivet	.25	67	17533		
326	Firing Pin	1.35	68	20100	Trigger Pin Trigger Plate, R.H	
382	Firing Pin Retaining Pin	.25	00	20100		
5913	Fore-end Assembly, BDL Grade (includes Fore- end, Fore-end Cap, Fore-end Cap Spacer, Fore-end Screw)	10.50		21575	Trigger Plate, L.H. Trigger Plate Assembly, R.H. (includes Action Bar Lock, Action Bar Lock Spring, Hammer, Hammer Pin, Hammer Plunger, Hammer	1
500	Fore-end Assembly (includes Fore-end, Fore-end Cap, Fore-end Cap Spacer, Fore-end Screw)	10.50			Spring, Magazine Latch, Safety, Safety Plun- ger, Safety Spring, Safety Spring Retaining	
5012	Fore-end Cap Screw	.25			Pin, Sear, Sear Pin, Sear Spring, Trigger As- sembly, Trigger Pin; Trigger Plate, R.H.; Trig-	
805	Front Sight	.70			ger Plate Pin Bushing, Frant; Trigger Plate Pin	1
5750	Front Sight, Carbine	.70			Bushing, Rear; Trigger Plate Pin Detent	t
5751	Front Sight, Carbine (Low)	.70			Spring, Front; Trigger Plate Pin Detent Spring,	
3510 3505	Front Sight Ramp	1.50		21576	Rear)	. 8
5331				A1370	Part No. 21575 except Trigger Plate 14	1
5697					used)	8
505			69	17417		
696			70	17541		
1339	Hammer		71		Trigger Plate Pin Detent Spring, Front	
455	Hammer Pin	.40		17540	Trigger Plate Pin Detent Spring, From	
465	Hammer Plunger			20602	Trigger Plate Pin Front	:
014	Hammer Spring	.25	22.70		Trigger Plate Pin, Rear	
	Magazine Assembly, 30-06 (includes Magazine, Magazine Follower, Magazine Spring)	3.90				
005		.85			MODEL 760 — ACCESSORIES (Extra Cost)	
1423 1525	Rear Sight Assembly (includes Rear Sight Col- lar, Rear Sight Eyepiece, Rear Sight Leaf.	.25		15902	Sling Strap and Mountings, complete Q.D. (in- cludes Barrel Band, Q.D.; Sling Strap As- sembly (7/8 inch), Swivel Assembly (2) Q.D.,	
	alâu unadăs Ariaul	3.30			Rear Swivel Screw Q.D.)	\$ 9.
	24					
53 56 55 56 13 14 10 10 14	31 97 05 96 39 55 65 14 30 05 23	31       Grip Cap         97       Grip Cap BDL         05       Grip Cap Spacer         96       Grip Cap Spacer BDL         39       Hammer         39       Hammer Pin         55       Hammer Plunger         4       Hammer Spring         30       Magazine Assembly, 30-06 (includes Magazine, Magazine Follower, Magazine Spring)         05       Magazine Latch (selected sizes)         23       Magazine Latch Spring         25       Rear Sight Assembly (includes Rear Sight Col-	31       Grip Cap       .45         97       Grip Cap BDL       .25         05       Grip Cap Spacer       .25         96       Grip Cap Spacer BDL       .25         97       Hammer       .85         98       Hammer       .40         65       Hammer Plunger       .25         14       Hammer Spring       .25         30       Magazine Assembly, 30-06 (includes Magazine, Magazine Follower, Magazine Spring)       3.90         05       Magazine Latch (selected sizes)       .85         23       Magazine Latch Spring       .25         25       Rear Sight Assembly (includes Rear Sight Col- lar, Rear Sight Eyepiece, Rear Sight Leaf,       .25	31       Grip Cap       .45         97       Grip Cap BDL       .25         05       Grip Cap Spacer       .25         96       Grip Cap Spacer BDL       .25         97       Hammer       .85         98       Grip Cap Spacer BDL       .25         99       Hammer       .85         15       Hammer Pin       .40         15       Hammer Spring       .25         14       Hammer Spring       .25         30       Magazine Assembly, 30-06 (includes Magazine, Magazine Follower, Magazine Spring)       3.90         05       Magazine Latch (selected sizes)       .85         23       Magazine Latch Spring       .25         25       Rear Sight Assembly (includes Rear Sight Col- lar, Rear Sight Eyepiece, Rear Sight Leaf,       .25	31       Grip Cap       .45         97       Grip Cap BDL       .25         05       Grip Cap Spacer       .25         96       Grip Cap Spacer BDL       .25         97       Hammer       .25         96       Grip Cap Spacer BDL       .25         97       Hammer       .25         97       Grip Cap Spacer BDL       .25         97       Grip Cap Spacer BDL       .25         97       Hammer       .85         97       Hammer       .85         97       Hammer Pin       .40         65       Hammer Spring       .25         14       Hammer Spring       .25         14       Hammer Spring       .25         10       Magazine Assembly, 30-06 (includes Magazine, Magazine Follower, Magazine Spring)       3.90         05       Magazine Latch (selected sizes)       .85         23       Magazine Latch Spring       .25         25       Rear Sight Assembly (includes Rear Sight Col- lar, Rear Sight Eyepiece, Rear Sight Leaf,       15902	31       Grip Cap       .45         97       Grip Cap BDL       .25         05       Grip Cap Spacer       .25         96       Grip Cap Spacer BDL       .25         97       Hammer       .25         98       Grip Cap Spacer BDL       .25         99       17417       Trigger Plate Pin Bushing, Front         17539       Trigger Plate Pin Detent Spring, Front         17540       Trigger Plate Pin Detent Spring, Rear         14       Hammer Spring       .25         130       Magazine Assembly, 30-06 (includes Magazine, Magazine Latch (selected sizes)       .25         133       Magazine Latch (selected sizes)       .85         134       Magazine Latch (selected sizes)       .85         135       Rear Sight Assembly (includes Rear Sight Collar, Rear Sight Leaf,       .25         147       Magazine Sight Experiece, Rear Sight Leaf,       .25         15902       Sling Strap and Mountings, complete Q.D. (includes Barrel Band, Q.D.; Sling Strap Assembly (7/8 inch) Switel Assembly (2/8 inch) Switel Assembly

DELIVERIES ARE F.O.B. ILION, N.Y.

PARTS AND PRICES SUBJECT TO CHANGE WITHOUT NOTICE

# INSTRUCTIONS FOR ORDERING PARTS

### (Please read carefully)

WHEN ORDERING PARTS .... MODEL NUMBER, PART NUMBER and PART NAME MUST BE GIVEN. Give also serial number (if any), and state caliber or gauge and choke needed. Please identify from the component parts, picture or section view. When ordering interchangeable shotgun barrels, please list on separate order form. This will speed up shipment to you.

Cover only one subject in letter or order. Do not order spare parts and give instructions on repair of a gun or guns in the same letter - this delays service.

Please do not ship sample parts to Firearms Factory unless it is impossible to identify from the Parts List or Instruction Folder. See shipping instructions concerning FACTORY SERVICE.

Parts will be furnished for discontinued models as long as the supply is available. We are unable to supply parts for models or repair guns not listed in Complete Line Parts List.

The sale of the following parts and certain other parts is restricted because special tools and gauges are required during assembly to make sure the firearm will operate properly. · Receiver

Breech Block or Bolt Barrel

The sale of barrels and bolts is restricted. Special tools, and gauges are required for assembly.

All parts will be shipped as ordered, but since they are made to close dimensions, the particular part may require slight adjustment or fitting to assure proper functioning of the arm.

IMPORTANT: Do not combine Part Orders with Gun Service Orders.

Please send Part Orders direct to:

REMINGTON ARMS COMPANY, INC.

PARTS DEPT. ARMS SERVICE DIVISION Ilion, New York 13357

# INSTRUCTIONS FOR FACTORY SERVICE

## Please read carefully before making shipment to the Firearms Plant at ILION, NEW YORK 13357

Please package carefully when shipping firearms to factory. Use plenty of cushioning material to prevent movement of gun or gun parts in package during transit.

Please do not ship gun in a gun case, or special container that must be returned from the factory. The return of your gun or parts will be greatly speeded if properly packaged in a throw-away carton.

All shipments should have forwarding and return address clearly marked on gun package as well as on attached letter.

To further improve service - please attach complete letter of information securely on outside of each package returned to the factory for repairs.

Please do not return gun accessories such as sling straps, quick release swivels, special boots, covers, telescopes, mounts or any special equipment to the factory with the gun shipment.

Give full details of the contents of the shipment - state whether complete gun or part. List model name and model number, serial number (if any), and caliber or gauge.

Give full condition of contents - stock and fore-end damage (if any), metal damage (if any), barrel bent or damaged (if any), parts missing, etc. A full description will enable us to more accurately list the needed repairs.

Cover only one subject in letter or order. Do not order spare parts

and give instructions on repair of a gun or guns in the same letter this delays service.

THEN - to avoid all possible delay in starting work on your gun or parts, please include in your first order or letter the trouble you wish corrected, any changes you desire, or parts you wish replaced.

If an estimate is required before the work is started, please advise. Otherwise we will proceed with the necessary work and send a statement of the cost to you. In this manner your gun or parts can be reshipped at the earliest possible date.

Unless you specify otherwise, shipments will be made by way of Parcel Past on small packages, Express on larger packages.

Remington gun parts are not interchangeable with those of any other make of gun. For this reason the Remington Arms Company, Inc. cannot service any gun not of our manufacture.

Repairs will be made on discontinued models as long as the supply of parts is available. However, repairs cannot be made for models which are not listed in Complete Line Parts List.

IMPORTANT: Before packaging guns for return to factory, ALL LIVE AMMUNITION SHOULD BE REMOVED.

If live ammunition is included in package, shipment cannot be made by Insured Mail. All other shipments may be made by Insured Mail, Express, Motor Transport, or Freight.

Please send repairs direct to-


REMINGTON ARMS COMPANY, INC. ARMS SERVICE DIVISION Ilion, New York 13357



Repeating RIFLE • CARBINE

# MODEL **760**

**REPLACEMENT PARTS:** Parts may be identified from the Sectional View.

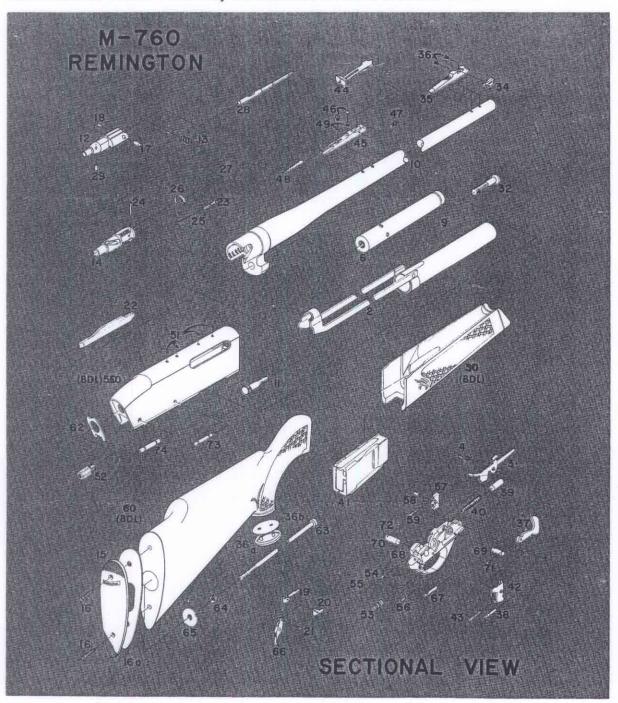

Send all guns for factory service and inquiries on service and parts to REMINGTON ARMS COMPANY, INC. Arms Service Division Ilion, New York 13357

All other inquiries are to be addressed to REMINGTON ARMS COMPANY, INC. Bridgeport, Connecticut 06602 **ADDITIONAL** CALIBERS

(Not Shown in Sectional View)



COMPONENT PARTS

SLIDE ACTION - HIGH POWER

270 Win., 308 Win., 223 Rem., 243 Win.

MODEL 760

List Price

Note: Part not listed same as 30-06 Caliber.

Part No.

## When ordering parts — Model No., Part No. and Part Name must be given.

Part No	NAME OF PART	List Price
	MODEL 760 — Additional Calibers (Not Shown in Sectional View)	
24623	Barrel Assembly, 243 Win.	1
24618	Barrel Assembly, 270 Win.	
24619	Barrel Assembly, 308 Win.	Price on
27955	Barrel Assembly, 223 Rem.	- ice
25918	Barrel Assembly, 308 Win. Carbine	
25662	Breech Bolt Assembly, 223 Rem	
15852	Ejector, 223 Rem.	\$ .55
17019	Ejector Spring, 223 Rem	.25
15850	Extractor, 223 Rem.	1.35
27342	Extractor Rivet, 223 Rem.	
27965	Magazine Assembly, 223 Rem.	
23033	Magazine Assembly, 270 Win.	3.90
23718	Magazine Assembly, 308 Win.	3.90
21385	Recoil Pad (with 2 screws)	3.75
23721	Magazine Assembly, 243 Win.	3.90

## MODEL 760 - Discontinued Calibers and Grades (Not Shown) 24617 Barrel Assembly 255

24617	Barrel Assembly, 35 Rem.	7
25919	Barrel Assembly, 35 Rem. Carbine	
25917	Barrel Assembly, 270 Win. Carbine	
25916	Barrel Assembly, 280 Rem. Carbine	
24621	Barrel Assembly, 280 Rem.	
23621	Barrel Assembly, 300 Sav.	. 5
20675	Bolt Carrier, 222 - 244 Rem., 300 Sav., 257 Robts.	Price on Application
23631	Breech Bolt Assembly, 35 Rem.	App
25661	Breech Bolt Assembly, 35 Rem. Carbine	-
24310	Breech Bolt Assembly, 222 Rem. (Extractor Rivet not used)	
23716	Magazine Assembly, 35 Rem.	
23034	Magazine Assembly, 280 Rem.	
19857	Ejector, 222 Rem.	.55
17019	Ejector Spring, 222 Rem.	.25
20467	Extractor, 222 Rem. (Extractor Rivet not used)	2.40
18608	Fore-end	5.50
19871	Fore-end, BDL Grade	12.10
15016	Fore-end, Carbine	5.50
23720	Magazine Assembly, 222 Rem.	3.90
23719	Magazine Assembly, 244 Rem.	3.90
23717	Magazine Assembly, 257 Robts.	3.90
23715	Magazine Assembly, 300 Sav.	3.90
24660	Stock Assembly	9.90

### MODEL 760 - Superseded or Service Parts (Not Shown)

19036	Action Tube Cap Assembly Pin	\$ .25
22660	Action Bar Assembly	5.80
21200	Action Tube Assembly	3.05
22795	Action Tube Cap	1.00
19936	Action Tube Guard	.40
23620	Barrel Assembly, 30-06 (includes Barrel, Bar- rel Extension, Breech Ring, Front Sight Ramp, Front Sight Ramp Pin)	
23622	Barrel Assembly, 35 Rem.	Price on pplication
23623	Barrel Assembly, 270 Win.	> ice
23625	Barrel Assembly, 308 Win.	App
23626	Barrel Assembly, 244 Rem.	
24275	Barrel Assembly, 222 Rem.	J

PARTS AND PRICES SUBJECT TO CHANGE WITHOUT NOTICE

ceiver sight is used) 630 Breech Bolt Assembly (30-06, 270 Win., 280 Rem., 308 Win. Calibers) 631 Breech Bolt Assembly (35 Rem. Caliber) 632 Breech Bolt Assembly (223 Rem. Caliber) 643 Butt Plate 645 Ejector Port Cover 644 Ejector Spring 657 Fore-end, Carbine 667 Fore-end Cap, Carbine 667 Fore-end Tube Nut 717 Front Sight Ramp Pin, 223 Rem. 643 Grip Cap 643 Grip Cap 643 Grip Cap 645 Sterew 645 Sterew 646 Sterew 646 Sterew 647 Rear Sight Assembly 648 Rear Sight Assembly, Camplete (includes Rear 649 Sight Assembly, Camplete (includes Rear 640 Sterew 640 Rear Sight Step, Carbine 641 Step, Rear Sight Screw, Rear Sight 642 Step, Rear Sight Screw, Rear Sight 643 Step, Rear Sight Assembly 644 Step, Rear Sight Screw, Rear Sight 645 Step, Rear Sight Step, Carbine 646 Step, Carbine 647 Step, Rear Sight Assembly 648 Rear Sight Step, Carbine 649 Rear Sight Assembly
631       Breech Bolt Assembly (35 Rem. Caliber)         632       Breech Bolt Assembly (223 Rem. Caliber)         631       Butt Plate         3378       Butt Plate         3378       Butt Plate         3378       Ejector Port Cover         3374       Ejector Port Cover         3374       Ejector Port Cover         3374       Ejector Spring         3374       Ejector Carbine         865       Fore-end, Carbine         867       Fore-end Cap, Carbine         8607       Fore-end Tube Nut         717       Front Sight Ramp, 223 Rem.         717       Front Sight Ramp Pin, 223 Rem.         843       Grip Cap         643       Grip Cap         708       Rear Sight Assembly         708       Rear Sight Assembly, Camplete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear Sight
632       Breech Bolt Assembly (223 Rem. Caliber)         601       Butt Plate         6378       Butt Plate         6459       Ejector Port Cover         6324       Ejector Port Cover         6374       Ejector Port Cover         6374       Ejector Spring         6365       Fore-end, Carbine         6476       Fore-end Cap, Carbine         6477       Fore-end Tube Nut         6407       Fore-end Tube Nut         717       Front Sight Ramp, 223 Rem.         6403       Grip Cap         643       Grip Cap         643       Grip Cap         708       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear
378       Butt Plate         459       Ejector Port Cover         324       Ejector Spring         374       Ejector Spring         3865       Fore-end, Carbine         8872       Fore-end         8071       Fore-end Cap, Carbine         8607       Fore-end Tube Nut         717       Front Sight Ramp, 223 Rem.         717       Front Sight Ramp Pin, 223 Rem.         9025       Front Sight Ramp Screw, 223 Rem.         643       Grip Cap         380       Grip Cap Screw         708       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Screw, Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         098       Rear Sight Step, Carbine
378       Butt Plate         459       Ejector Port Cover         324       Ejector Spring         374       Ejector Spring         3865       Fore-end, Carbine         8872       Fore-end         8071       Fore-end Cap, Carbine         8607       Fore-end Tube Nut         717       Front Sight Ramp, 223 Rem.         717       Front Sight Ramp Pin, 223 Rem.         9025       Front Sight Ramp Screw, 223 Rem.         643       Grip Cap         380       Grip Cap Screw         708       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Screw, Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         098       Rear Sight Step, Carbine
459       Ejector Port Cover         324       Ejector         3374       Ejector Spring         3865       Fore-end, Carbine         8872       Fore-end         8018       Fore-end Cap, Carbine         8607       Fore-end Tube Nut         717       Front Sight Ramp, 223 Rem.         4477       Front Sight Ramp Pin, 223 Rem.         643       Grip Cap         643       Grip Cap         708       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Screw, Rear Sight Screw (2), Rear Sight Screw, Rear Sight Step, Rear Sight Screw, Rear Sight Step, Rear Sight Step, Carbine
1374       Ejector Spring         1865       Fore-end, Carbine         1872       Fore-end         1872       Fore-end         1871       Fore-end Cap, Carbine         18607       Fore-end Tube Nut         18707       Front Sight Ramp, 223 Rem.         18707       Front Sight Ramp Pin, 223 Rem.         18707       Front Sight Ramp Screw, 223 Rem.         1880       Grip Cap         1880       Grip Cap Screw         1880       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear Screw, Screw, Screw, Screw, S
865       Fore-end, Carbine         872       Fore-end         801       Fore-end Cap, Carbine         9018       Fore-end Tube Nut         9017       Front Sight Ramp, 223 Rem.         9025       Front Sight Ramp Pin, 223 Rem.         9025       Front Sight Ramp Screw, 223 Rem.         9038       Grip Cap         9043       Grip Cap         9058       Rear Sight Assembly, Camplete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         9088       Rear Sight Step, Carbine
872       Fore-end         6018       Fore-end Cap, Carbine         607       Fore-end Tube Nut         607       Fore-end Tube Nut         717       Front Sight Ramp, 223 Rem.         643       Grip Cap         643       Grip Cap         708       Rear Sight Assembly         200       Rear Sight Assembly, Camplete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear Sight Step, Rear Sight Screw, Rear Screw, R
1018       Fore-end Cap, Carbine         1007       Fore-end Tube Nut         1007       Front Sight Ramp, 223 Rem.         1025       Front Sight Ramp Pin, 223 Rem.         1025       Front Sight Ramp Screw, 223 Rem.         1025       Front Sight Ramp Screw, 223 Rem.         1025       Grip Cap         10380       Grip Cap         10380       Grip Cap Screw         10380       Rear Sight Assembly         10380       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear Sight Screw, Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         1098       Rear Sight Step, Carbine
1607       Fore-end Tube Nut         717       Front Sight Ramp, 223 Rem.         1477       Front Sight Ramp Pin, 223 Rem.         1025       Front Sight Ramp Screw, 223 Rem.         1025       Front Sight Ramp Screw, 223 Rem.         1026       Grip Cap         1380       Grip Cap Screw         708       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base Screw (2), Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         1098       Rear Sight Step, Carbine
717       Front Sight Ramp, 223 Rem.         .477       Front Sight Ramp Pin, 223 Rem.         .025       Front Sight Ramp Screw, 223 Rem.         .643       Grip Cap         .380       Grip Cap Screw         .708       Rear Sight Assembly         .200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base Screw (2), Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         .098       Rear Sight Step, Carbine
4477       Front Sight Ramp Pin, 223 Rem.         1025       Front Sight Ramp Screw, 223 Rem.         1043       Grip Cap         1643       Grip Cap         1643       Grip Cap Screw         1708       Rear Sight Assembly         1200       Rear Sight Assembly         1200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base Screw (2), Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         1098       Rear Sight Step, Carbine
025       Front Sight Ramp Screw, 223 Rem.         0643       Grip Cap         0380       Grip Cap Screw         708       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base Screw (2), Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         098       Rear Sight Step, Carbine
643       Grip Cap         380       Grip Cap Screw         708       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         098       Rear Sight Step, Carbine
643       Grip Cap         380       Grip Cap Screw         708       Rear Sight Assembly         200       Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base, Rear Sight Base, Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)         098       Rear Sight Step, Carbine
<ul> <li>708 Rear Sight Assembly</li></ul>
<ul> <li>Rear Sight Assembly, Complete (includes Rear Sight Assembly, Rear Sight Base, Rear Sight Base Screw (2), Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2)</li> <li>Rear Sight Step, Carbine</li> </ul>
Sight Assembly, Rear Sight Base, Rear Sight Base Screw (2), Rear Sight Screw, Rear Sight Step, Rear Sight Washer (2) 098 Rear Sight Step, Carbine
inter sign step; salating
708 Rear Sight Assembly
roo kour olgin Assembly
620 Rear Sight Assembly, Carbine (includes Rear Sight Collar, Rear Sight Dovetail, Rear Sight Eyepiece, Rear Sight Leaf)
851 Stock Assembly

NAME OF PART

#### SUPERSEDED ACCESSORIES

22796	Action Tube Cap (for swivel)	\$
15261	Barrel Band Swivel (Carbine)	1
22305	Front Swivel Assembly (includes Front Swivel, Front Swivel Collar)	
113	Front Swivel Screw	
22241	Front Swivel Screw (Q.D.)	
20430	Quick Detachable Swivel (Q.D.) Front or Rear, each	
20895	Stock Swivel Rear Assembly (includes Stock Swivel, Stock Swivel Screw, Stock Swivel Pin)	
17680	Stock Swivel Screw	
20215	Sling Strap Assembly 1-inch	
25546	Sling Strap and Mountings Complete (includes Action Tube Cap, Sling Strap Assembly, Front Swivel Assembly, Front Swivel Screw, Stock Swivel Rear Assembly)	
26920	Sling Strap and Mountings, Complete (Carbine use) (includes Sling Strap Assembly, Barrel Band Swivel, Stock Swivel Rear Assembly)	
25547	Quick Detachable (Q.D.) Sling Strap Assem- bly, Complete (Not used on Carbine)	

DELIVERIES ARE F.O.B. ILION, N.Y.

BARREL CLEANING — Push safety ON SAFE. Caution: Always make certain no live cartridge remains in barrel. Remove magazine, open action, and look into empty barrel chamber. For temporary cleaning, use lightly oiled cloth patches. Pull cleaning rod from breech to muzzle. Scrub bore and cartridge chamber in barrel with cleaning solvent, if necessary. Re-oil very lightly.

During field use, Remington guns will remain clean longer and continue to give all-weather satisfaction, if very little oil or lubrication is used.

TAKE DOWN INSTRUCTION — (see Sectional View) Push safety ON SAFE. Open action. Remove magazine. Tap out trigger plate pins and remove trigger plate assembly. Note: Trigger Plate Assembly (Fire Control) may be cleaned without further disassembly. (See Fig. 1).

This Remington rifle has been designed to satisfy your fullest expectations for excellence. Quality materials and sound manufacturing practices went into the making of this gun. The receiver was expertly milled and finish cut to design specifications. The barrel was forged and rifled by skilled barrel makers. The coloring vats have added a dense gun metal coating to metal parts.

Stock and forearm have been fully seasoned in wood kilns, then shaped by experienced wood workers. Then a durable and long lasting wood finish has been applied to bring out the natural wood grain. All parts have been carefully assembled to make a strong and smooth working action. Finally, gallery testing in shooting butts and at the range have certified that a fine rifle has been produced for your shooting pleasure and lasting satisfaction.