

grade lists both rifle and carbine length models. A five (5) shot capacity is available in both models, counting four (4) cartridges in detachable clip magazine and one (1) in barrel

chamber. Extra clips can be ordered. A new step receiver styling design for the BDL provides a level-line sighting from stock to sights. Front and rear sights are removable for additional telescope mounting sight requirements. Barrel screw holes may be filled with receiver plug screws removed from receiver.

The American walnut stock features a cheekpiece and Monte Carlo comb on the BDL grade. For left hand shoot-ers, a cheekpiece and left hand safety are available in the BDL. In both grades, the form fitting pistol grip has been accentuated with a black cap and white spacer. A black fore-end tip and white spacer are also standard items on the fore-ends of both grades.

Custom checkering has been applied to the stock and fore-end. An attractive basket weave pattern highlights the BDL grade while a neat "skip line" design is offered in the standard. The tough Du Pont RK-W wood finish adds a lustrous quality appearance to both grades.

SAFETY (Fig. 1) — Cross bolt type at rear of trigger. Red band marking on safety will not show when safety is pushed across to ON SAFE stop position. Trigger cannot be pulled to fire cartridge.

Caution: Before firing make sure barrel is clean, free of heavy oil, grease, snow, or any obstruction.

To FIRE - Push safety to FIRE position. Red band marking on safety will show.

MAGAZINE LATCH

ASSEMBL

ION BAR LOCK

ATE

AC

EP

SAFETY

REPEAT FIRING - Trigger must be pulled each time. Slide fore-end back and forth to eject fired cartridge case and reload barrel.

TO SINGLE LOAD BARREL - Push safety ON SAFE. Unlock action by pressing upward on action bar lock (Fig. 1). Slide fore-end back to open action. Drop cartridge into open receiver port and upon empty magazine. Close action to load cartridge in barrel.

TO MAGAZINE LOAD — Push safety ON SAFE. Rotate magazine latch (Fig. 1) forward and pull out magazine. Load cartridges toward small front end of magazine. Press cartridges down into magazine one upon the other, until held in a stagger column. When fully loaded, magazine will hold four (4) cartridges. To replace magazine, operate latch again, push magazine evenly into gun. Release latch as magazine clicks into locked position.

TO UNLOAD MAGAZINE – Remove from gun and slide cartridges carefully forward and out of magazine. Extra magazines may be carried for fast reloading.

TO UNLOAD BARREL - Push safety ON SAFE. Remove magazine. Press action bar lock upward to unlock action. Open action slowly, and carefully remove live cartridge from receiver.

SIGHT ADJUSTMENT - Factory sights on Remington high power rifles are targeted at 100 yards and carefully SIGHT ADJUSTMENT — Factory sights on Remington high power rities are targeted at 100 yards and caretully adjusted at factory for average shooters. If your rifle does not appear to shoot accurately it does not necessarily mean that sights are improperly aligned. Individual differences in eyesight or method of shooting may require sight re-alignment. Make sure that adjustable dovetail front sight (where supplied) is centered on barrel. Before attempting to re-align sights it should be realized that the greater the group size the more difficult it becomes to determine where rifle is shooting (center of impact). A consistent method of holding rifle, aiming and squeezing trigger will aid in obtaining a small group size. Different sight settings are required for each cartridge type, bul-let type and weight, barrel length, each range and wind condition and, most likely, each individual shooter. To test rifle for accuracy place large target in safe area at desired range. (Before testing at a longer range it is


advisable to fire a few rounds at 50 yords. At this range, bullets will generally hit somewhere on target.) Shoot from a prone or sitting position giving body and el-SIGHT STEP Fig. 2

deliberately. If groups are at desired point, sights are cor-rectly adjusted. If not, you should adjust sights.

If shots are too high, lower rear sight. If shots are too low, rear sight should be raised. If rifle shoots left, rear sight should be moved right by turning windage screw counter clockwise. Should rifle shoot to right, move rear sight to left, turning screw clockwise. Always move rear sight in direction you want rifle to shoot.

Information about trajectory or ballistics of your favorite load may be found in the Remington Firearms and Ammunition Catalog. A free copy may be obtained from Remington dealers or by writing to Remington Arms Co., Inc., 939 Barnum Ave., Bridgeport, Conn. 06600.

HANDLING - Wipe barrel, receiver, and all steel parts to prevent rusting. Invisible "prints" of moisture can cause rust unless removed. After cold weather use, when gun is returned to warm room temperature, condensation and wetness may form. Take care that this is removed. In particular wipe dry cartridge chamber in breech of barrel, barrel bore, breech bolt, and other action parts. Lubricate sparingly unless for storage, then lubrication should be quite thorough. For cold weather shooting, use dry graphite instead of light oil. Use sparingly—a clean gun performs best.

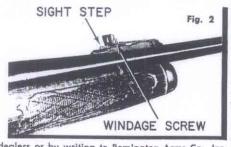

REMINGTON ARMS COMPANY, INC. ILION, NEW YORK, U.S.A. . "Gamemaster" is Reg. U.S. Pat. Off. by Remington Arms Company, Inc., Bridgeport 2, Conn.